



Инструкция по использованию гитарного комплекта звукоснимателей **EMG VG20 VINCE GILL**

(на английском языке)

- Технические характеристики
- Схемы подключения для различных конфигураций в картинках




0230-01.04A

PO BOX 4394
SANTA ROSA, CA
95402 USA

P (707) 525-9941
F (707) 575-7046
EMGPICKUPS.COM




INSTALLATION INFORMATION

EMG MODEL: VG-20 (PRO-SERIES ASSEMBLY)

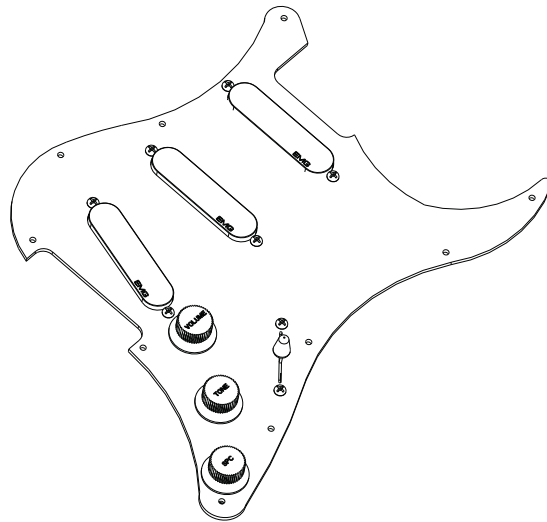

GENERAL INFORMATION:

The VG-20 is a pre-wired pickupguard assembly that has been used by Vince Gill since 1996. It has 3 of our EMG-S Pickups installed and features a 5 position selection switch, standard passive tone control (High-End rolloff) as well as our SPC Accessory circuit. The S Pickups feature a Ceramic Bar magnet for bright tone and amazing sustain. The SPC Control adds the feature of a mid-boost designed to recreate the sound of a dual-coil pickup. The SPC control is effective when turned clockwise, and fully bypassed when it is turned counter-clockwise.

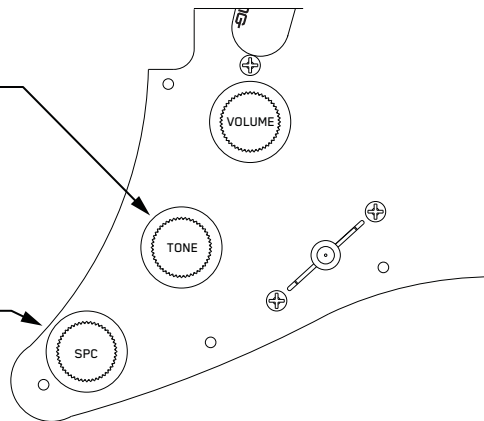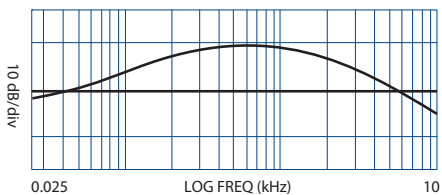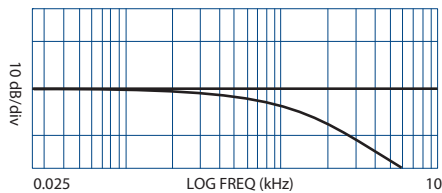

SPECIFICATIONS:

Logo Color	
Magnet Type	Silver
Resonant Frequency (KHz)	Ceramic
Output Voltage (String)	4.35
Output Voltage (Strum)	1.00
Output Noise (60 Hz)	1.50
Output Impedance (Ohm/System)	-91
Current @9V (Microamps/Complete System)	2000
Battery Life (Hours)	858
Supply (Volts DC)	300
	9

MODEL:

S Pickup
Silver
Ceramic
4.35
1.00
1.50
-91
2000
858
300
9

WARRANTY

All EMG Pickups and accessories are warranted for a period of two years. This warranty does not cover failure due to improper installation, abuse or damage. If upon examination the pickup is determined to be defective, a replacement will be made. Warranty replacement products are covered by this same warranty. This warranty covers only those pickups and accessories sold by authorized EMG Dealers. This warranty is not transferable.

INSTALLATION NOTES:

The only tools you will need for the installation are a #1 Phillips screwdriver and a 3/8 inch hex nut-driver. The Pickups and controls are pre-installed on a 11-Screw pickguard and should fit easily onto any Strat*-Style Guitar.

- 1) Remove the Strings.
- 2) Unscrew the existing Output Jack Plate (2 screws) and either unsolder or cut the 2 wires going to the existing output jack.
- 3) Remove the existing Output Jack and install the 12B Stereo Jack included with the VG-20 System.
- 4) Install the 12B Jack onto the Jack plate with the spring terminals pointing downward, as shown in Diagrams #1 and #1a.
- 5) Route the Output cable (WHITE) and the battery Negative wire (GREEN) through the hole in the Jack cavity into the Control cavity.
- 6) Screw the Jack plate into place and insert a 1/4 plug into the Jack to make sure it goes in all the way. If all seems to fit fine remove the plug.
- 7) Insert the Output Cable connector onto the Main PC Board marked WHT/BLK and insert the GREEN wire onto the pin marked GRN. Diagram #2
- 8) Place a 9 Volt Battery into the Control cavity as shown and insulate it with the foam provided. Diagram #2
- 9) With the battery in place and connected, it's a good idea to test the system before you screw the pickguard down. Plug a cable into the jack and into the amp, and turn up the volume slightly. Tap on the pickups with a small metallic screwdriver and make sure each pickup is working.
- 10) If all seems OK, screw the pickguard into place, restring and adjust the pickups as close as possible to the strings.

To replace the battery:

Remove the 4 screws immediately surrounding the controls, lift the pickguard, remove and replace the battery. See Diagram #3

Diagram #1


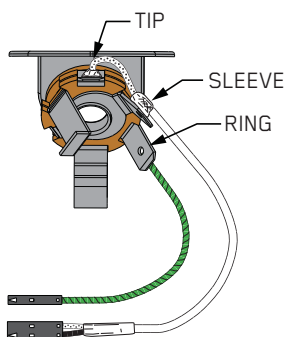


Diagram #1a

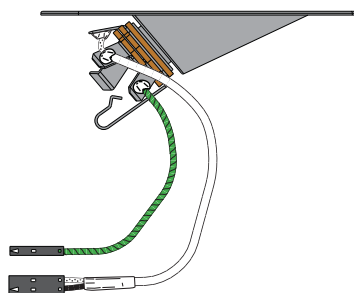

If the instrument has a Battery Holder:

If your instrument has a 9 or 18 Volt battery holder you can still use the EMG Connectors to supply power to the pickups. Simply cut and strip the wires from the battery clip provided. Twist the wires together and use the shrink tubing included to cover the connections. Soldering the wires is the preferred.

Cover these connections with the shrink tubing provided.

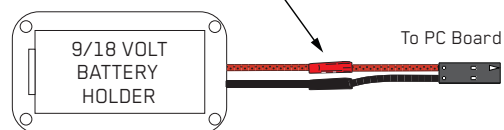


Diagram #2


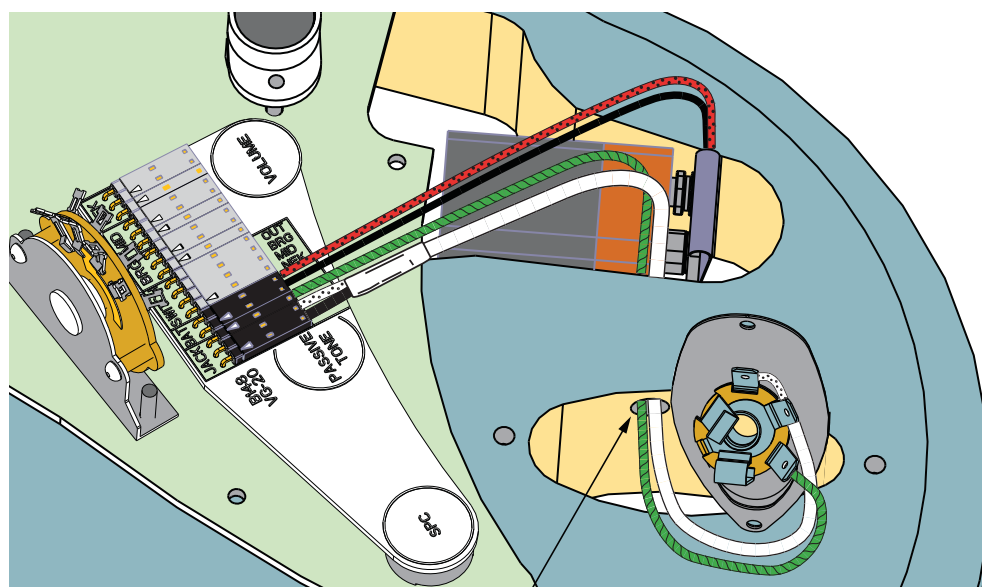


Diagram #3

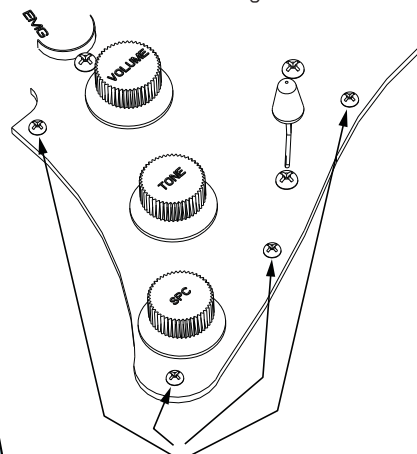

Battery Replacement:
Remove these 4 screws, gently lift the pickguard, remove and replace the battery.