



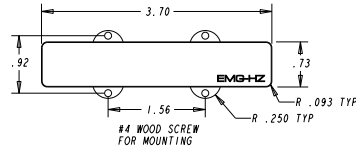

Инструкция по использованию
комплекта
бас-гитарных звукоснимателей
EMG PJHZ Set

(на английском языке)

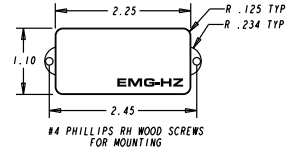

INSTALLATION INFORMATION

EMG-HZ Model:
PJ-HZ Set

Specifications:

Model:	P-HZ	LJ-HZ
Logo Color	Silver	Silver
Inductance (Henries)	3.0	2.27
DC Resistance (K ohms)	8.0	7.90
Resonant Frequency (1)	2550	2900
Resonant Frequency (2)	4700	4200
Impedance @ Resonance (K ohm)(1)	48.0	41.3

Notes:

- (1) Loaded with 250K or 500K V @ T w/20' cable (800pf)
- (2) Loaded with 1 Meg ohm/47pf

Each pickup includes:

- 4 pin (P-HZ)/5 pin (LJ-HZ) cable pre-wired in Series format.
- 4 each #4 Phillips Head wood screws

IMPORTANT INSTALLATION NOTES:

Recommended overall string width: 2.75"

The PJ-HZ Set is recommended for 4 string basses.



With the Quik-Connect cable installed on the back of the pickup, the arrow on the connector should be facing up.




EMG-HZ Warranty:

All EMG-HZ Pickups and accessories are warranted for a period of two years. This warranty does not cover failure due to improper installation, abuse, or damage. If at any time a pickup fails to work, return it postage prepaid with proof of purchase. If upon examination the pickup is determined to be defective, a replacement will be made at no charge. Warranty replacement products are covered under this same warranty. This warranty covers only those pickups and accessories sold by authorized EMG Dealers.

EMG-P-HZ Cable Orientation

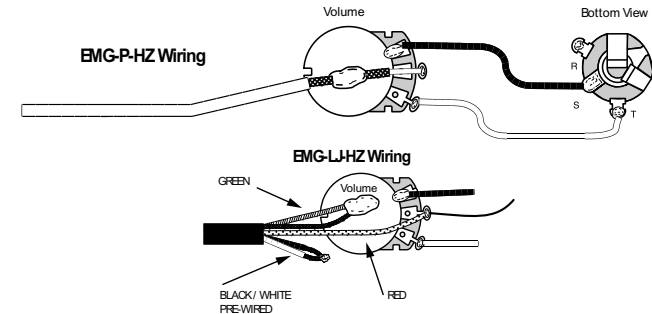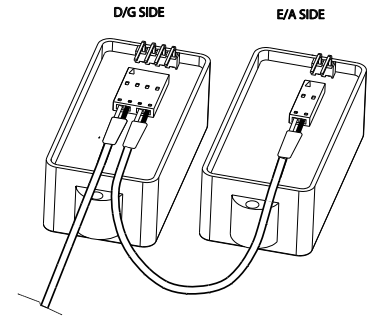

EMG-PJ-HZ Set Diagram 2
2 Volume, 1 Tone
(each Volume is independent)

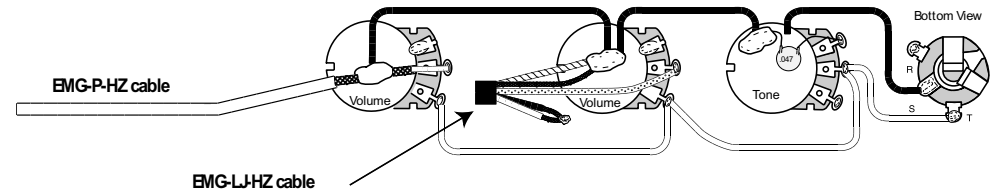

EMG-PJ-HZ Set Diagram 3
1 Volume, 1 Tone w/switch

